



1. Product Name

8 Colour Wirefree Controller

2. Product Code

504815

3. Colour

White

4. Brief Description

Wirelessly controls the colours of many of our products (Wall Panels, Bubble Tubes, Light Source and so on), but without sound, timer facility or LCD display. Also controls bubbles of ROMPA® bubble tubes and Bubble Wall Panel.

5. Contents

- 1 x controller
- 1 x international battery charger
- 1 x USB lead

6. Snoezelen® Stimulations

- Sight
- Touch

7. Best Use

Use indoors with Wi Fi responsive products.

8. Starting Up

- Press a button and the controller comes ON automatically.
- Press a coloured button to change the colour of the Wi Fi responsive product(s) e.g. blue button to turn the product light blue.
- Press the central button to turn bubble tube/wall bubbles ON and OFF.

9. Detailed Description

Wirelessly controls the colours of many of our products (Wall Panels, Bubble Tubes, Light Source and so on), but without sound, timer facility or LCD display. Also controls bubbles of ROMPA® bubble tubes and Bubble Wall Panel. With 2 external jack sockets to add your own switches, enabling the user to step through the colours and / or turn bubbles on and off. Not compatible with Sensory Magic™.

10. Safety

- Supervise the use of this product.

11. Technical Specification

Size: 37cm diameter x 12cmH
Weight: 1340g
CE: This product meets the requirements of EN60950

12. Installation


1. This 8 Colour Wirefree Switch has been designed to be simple to use and has no ON/OFF switch. The switch turns itself on automatically as a button is pressed and turns itself off automatically after each button press.

2. Press a coloured button to change the colour of the Wi Fi responsive product(s) e.g. blue button to turn the product light blue; red button to turn the product light red and so on.
- 3.
4. Press the central bubble / reset button (shown right) to turn bubble tube/wall bubbles ON and OFF.
5. The central button also allows the controller to be reset. Press and hold down the central bubble / reset button for 5 seconds to reset room colours to their automatic cycle through a rainbow of colours.



External jack sockets

2 external 3.5mm jack sockets are included for switch operation:

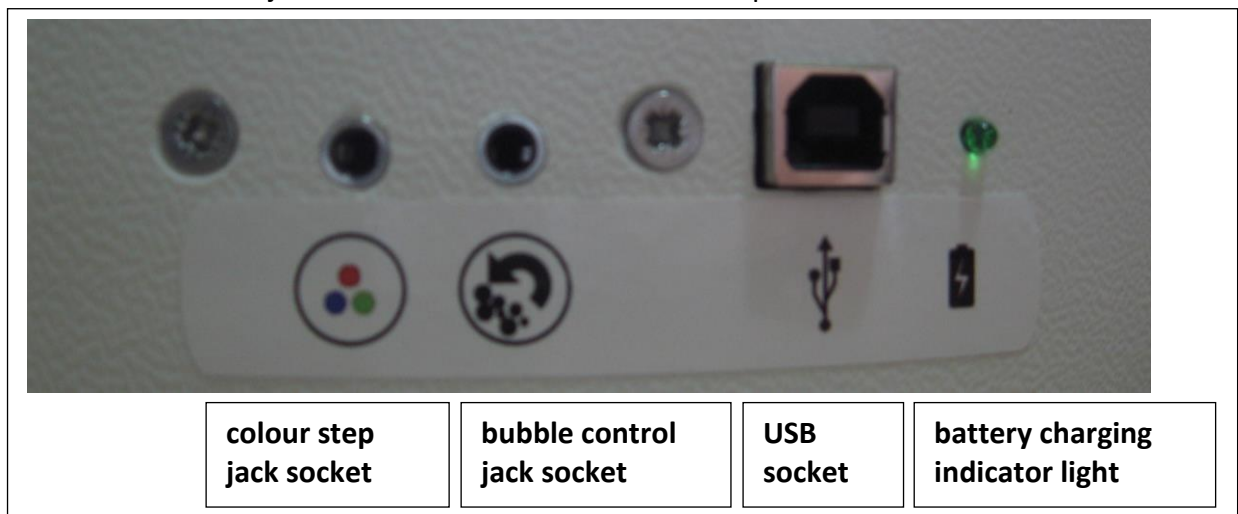

Colour Step Jack Socket

Attach a switch to this jack socket to enable the user to step through all 8 colours with one simple switch action.

Bubble Control Jack Socket

Attach a switch to this jack socket to enable the user to turn bubble tube and bubble wall panel bubbles on and off with one simple switch action

14. Care and Maintenance

Recharging the Controller

- Plug the battery charger provided into the USB socket and turn the mains power on. The green indicator light will illuminate to show that the switch is being charged. The green light will go out when the switch is fully recharged.

General Care

- Store in a clean, dry place when not in use.